


SPECIFIKACE PRODUKTU

Provozní proud	180 ~ 280 mA	Provozní napětí	4,5 V
Provozní teplota	0 °C ~ 40 °C	Provozní vlhkost	20 % ~ 80 %

INFORMACE O KARTÁCH

- MASTER KARTA (PROGRAMOVÁNÍ):**
(Jde o kartu, kterou nastavíte jako MASTER KARTU dle návodu.)
Je určena k nastavení nebo smazání uživatelské karty. Může sloužit i pro nouzové otevření.
- UŽIVATELSKÁ KARTA (KLÍČ K ZÁMKU):**
Slouží uživateli k otevírání a zavírání zámku. K jednomu zámku lze naprogramovat 50 karet.

INFORMACE O TLAČÍTKÁCH



TLAČÍTKO A: Tlačítko pro přepínání režimu (přiložte MASTER kartu a krátkým stisknutím tlačítka "A" přepněte režim).

TLAČÍTKO B: Přiložte MASTER kartu pro nastavení nové UŽIVATELSKÉ karty. (v režimu veřejné skříňky je účinná po instalaci baterie do 10 sekund)

INFORMACE O REŽIMECH



Přiložte MASTER kartu

Stiskni tlačítko "A" pro přepnutí režimu

- REŽIM RUČNÍHO ZAVŘENÍ („1xPÍPNUTÍ“):**
Zámek se nezamkne, dokud se uživatelská karta nepřiloží k zámku.
- REŽIM AUTOMATICKÉHO ZAVŘENÍ („2xPÍPNUTÍ“):**
Zámek se uzamkne po 6 sekundách. V případě přiložení karty dříve než po 6 sekundách, zámek se uzamkne.
- VEŘEJNÝ REŽIM („3xPÍPNUTÍ“):**
Zámek zůstane otevřený, dokud nový uživatel nepřetáhne kartu uživatele. (Režim jedné karty)

UPOZORNĚNÍ NA NÍZKÉ NAPĚTÍ

- Když napětí klesne na 3,8 V , ozývá se alarm každou hodinu, aby připomněl nutnost výměny baterií.
- Když napětí klesne na 3,7 V , zůstane odemčeno a nelze zamknout dveře.

 UPOZORNĚNÍ

- PŘED ZAVŘENÍM DVEŘÍ VYZKOUŠEJTE, ZDALI ZÁMEK FUNGUJE SPRÁVNĚ.
- POUŽÍVEJTE POUZE NOVÉ ALKALICKÉ BATERIE AAA.
- VSTUPNÍ NAPĚTÍ NESMÍ BÝT VYŠŠÍ NEŽ 6.5 V.
- PŘI MONTÁŽI VÍCE ZÁMKŮ V TĚSNÉ BLÍZKOSTI JE NUTNÉ DODRŽET MINIMÁLNÍ ROZESTUP 20 cm. MENŠÍ VZDÁLENOST MŮŽE ZPŮSOBIT VZÁJEMNÉ RUŠENÍ BEZDRÁTOVÉ KOMUNIKACE, ZVÝŠENOU SPOTŘEBU ENERGIE A PROBLÉMY S AUTOMATICKÝM OTEVÍRÁNÍM ZÁMKŮ, PŘI POKLESU NAPĚTÍ.


Naprogramování jakékoliv karty vznikne MASTER, nebo uživatelská karta.

****Master kartu doporučujeme nepoužívat pro běžné otevírání / zavírání zámku ****

• NASTAVENÉ MASTER KARTY



• NASTAVENÍ UŽIVATELSKÉ KARTY

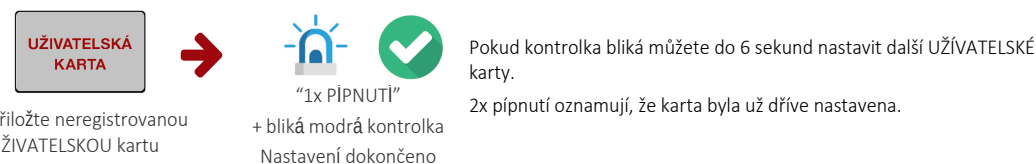

• SMAZÁNÍ UŽIVATELSKÉ KARTY



• SMAZÁNÍ VŠECH UŽIVATELSKÝCH KARET



Všechny uživatelské karty jsou smazané

PRODUCT SPECIFICATION

Working Current	180 ~ 280 mA	Working voltage	4,5 V
Working Temp.	0 °C ~ 40 °C	Working Humidity	20 % ~ 80 %

CARD INTRODUCTION

• MANAGEMENT (PROGRAMMING) CARD:


(The authority is given by lock. The first card to program is called management card.)

To set up or delete customer card. It shall not be used to open or close a lock unless in emergency.

• USER CARD (THE KEY OF THE LOCK):

For an user to open or close the lock. Capable of storing 50 cards per lock.


BUTTON INTRODUCTION



BUTTON A : mode switch button (Short press button A to switch mode).

BUTTON B : Set / reset button.

MODE INTRODUCTION



Swipe the management card

Press "A" mode button for mode switching

• MANUAL-LOCK MODE ("1xBEEP"):

Stay unlocked until any user card swiping.

• AUTO-LOCK MODE ("2xBEEP"):

Door will be locked after 6 seconds.

• PUBLIC LOCKER MODE (ONE-TIME USE "3xBEEP"):

Swipe a card to lock the door, it's occupied until unlock by the same card and available the next user.

LOW VOLTAGE ALARM

- When the voltage is down to 3.8V, there are red light flash 3 seconds and 4xBEEP warning sound. Please change new batteries immediately.
- (SDWS series) When the voltage is down to 3.7V, the door latch will retract automatically to unlock and unable to be locked anymore.



WARNING


- PLEASE INSERT 3PCS NEWAAA ALKALINE BATTERIES. THERE IS ALARMSOUNDIF VOLTAGE IS TOO LOW.
- VOLTAGE INPUT CANNOT BE MORE THAN 6.5V
- WHEN INSTALLING MULTIPLE LOCKS IN CLOSE PROXIMITY, A MINIMUM DISTANCE OF 20 cm MUST BE MAINTAINED. A SMALLER DISTANCE MAY CAUSE INTERFERENCE IN WIRELESS COMMUNICATION, INCREASED POWER CONSUMPTION, AND ISSUES WITH AUTOMATIC LOCK OPENING IN CASE OF A VOLTAGE DROP.

G3N20240729


Programming any card creates a MASTER or user card.

** We recommend not using the master card for normal opening / closing of the lock **

• REPLACE MANAGEMENT CARD

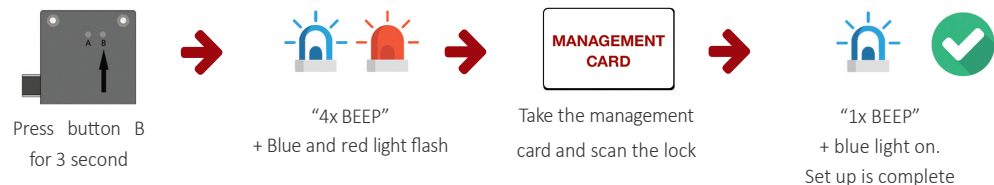

• SET UP USER CARDS

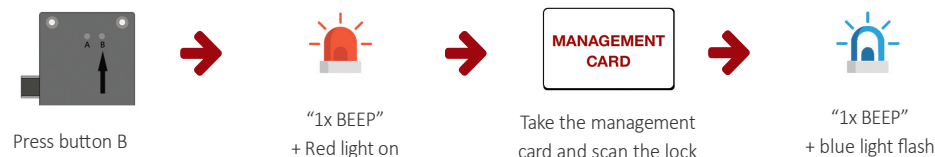

The additional cards can be set up when the blue light flash (2xBEEP sound shows the user card has been set up previously. Please swipe the user card for set up within 6 seconds).

• DELETE AN INDIVIDUAL USER CARD



• DELETE ALL USER CARDS

